

Engine run irregularly

- ⊖ Engine run irregularly, The High RPM is sporadic
 - ⊖ 1 One of spark plug was failure ——— Check and adjust
 - ⊖ 2 One of impulse was failure ——— Change
 - ⊖ 3 One electric wire connector failure ——— Check and adjust
 - ⊖ 4 The wire of charge coil was broken because of touch the flywheel ——— Check and change it
 - ⊖ 5 Clean the carburetor

- ⊖ No High RPM
 - ⊖ 1 CHOKE of the carburetor is closed ——— Check and adjust
 - ⊖ 2 Intake valve broken for 2-stroke engine ——— Check and replace
 - ⊖ 3 Clean the carburetor
 - ⊖ 4 Refer the solution for High RPM sporadic
 - ⊖ 5 The woodruff key on the flywheel was broken ——— Check and replace

- ⊖ Engine vibrates excessively
 - ⊖ 1 Impulse coil loosen ——— Check and adjust
 - ⊖ 2 Fly wheel broken or loosen ——— Check, Change
 - ⊖ 3 Clean carburetor

- ⊖ 1 Charge coil or Starter touch the flywheel ——— check and adjust

